Note: If you have already set the limits you can not reverse the motor direction. You must delete the limits and start from the

beginning.





IMPORTANT READ ME FIRST

 
- The delay time between buttons is within 6 seconds. If there is no input within 6 seconds, the remote will exit the current setting procedure
- 2. The motor will jog and beep as a hint. Continue programming after the hint.

1 Pairing



Apply power to motor (1 jog and long beep once), within 7s, press STOP for 2s (2 jogs and 3 beeps), the motor has been paired successfully

2 Switching Rotating Direction (Optional)




If the UP button is pressed, but the screen goes down, you will need to complete this step


Press and hold the UP and DOWN buttons simultaneously for 2s, motor will jog once and rotation will be switched successfully

*The motor needs to be in the reversing operation without limits

3 Setting Upper and Lower Limits

  
UPPER LIMIT






Press and hold UP + STOP simultaneously for 2s (2 jogs, 3 beeps) upper limit

  LOWER LIMIT






Press and hold DOWN + STOP simultaneously for 2s (2 jogs, 3 beeps) Lower


4 Adjusting Limits

 Adjust Upper Limit



Press and hold UP + STOP simultaneously for 5s (1 jog, 1 Long beep) Repeat step 3

 Adjusting Lower Limit



Press and hold DOWN + STOP simultaneously for 5s (1 jog, 1 Long beep) Repeat step 3

5 Preferred Position

Set Preferred Position



Check that both upper and lower limits are set.

Operate the screen to the desired preferred position. Press P2 (1 jog and 1 beep), press STOP (1 jog and 1 beep), press STOP again (2 jogs and 3 beeps), preferred position is now set

Remove Preferred



 
Press P2 (1 jog and 1 beep), press STOP (1 jog and 1 beep), press STOP again (1 jog and 1 Long beep), preferred position is now deleted

6 Delete All Limits



Press P2 (1 jog and 1 beep), Down and 1 beep), P2 (2 jogs and 3 beeps), all limits are now removed


7 Pair / Unpair Additional Remotes



Remote A → Remote B

On existing remote, Press P2 (1 jog and 1 beep) Press P2 again (1 jog and 1 beep), then on new remote, press P2 (2 jogs and 3 beeps). New remote is now linked. Repeat for any additional remotes

 8 Remove All Remotes



Press P2 (1 jog and 1 beep), STOP (1 jog and one beep), P2 (2 jogs and 3 beeps)

9 Setting Number of Channels

1. Press the LEFT and RIGHT buttons simultaneously, a "C" will appear followed by "15"



2. Press the LEFT arrow to display the desired number of channels to be displayed on the remote



3. Press the Stop Button, a square will appear on the screen, number of channels has been saved



10 Motor Mode Switching



Press P2 (1 jog and 1 beep), UP (1 jog and one beep), UP (1 jog and 1 long beep)

Troubleshooting

Issue – Possible Cause	Solution
Motor has no response - No	Check power and connections
Power or poor wire	
connection	
Motor has no response -	Replace Battery
Remote battery low	,
Motor has no response - RF	Check motor antenna, check
Interference	for other RF source
	interference
Motor has no response - Out	Move remote closer to unit
of remote control range	
Remote can't control single	Use multi-channel remote to
motor - Multiple motors	control multiple screens or
paired to the same channel	single channel per screen
Motor starts slow or makes	Verify installation is correct
loud noise - Incorrect	and level
installation or overload	
Motor stops during travel -	Adjust limits
Motor has reached limit	
Motor stops during travel -	Allow motor to cool to reset
Run time exceeds 4 minutes	the internal thermal fuse
Screen does not reach lower	Remove hood and check for
limit or goes too far into the	re-wrap, break limits if
housing – Screen has re-	needed to relieve re-wrap
wrapped itself	