


size to accommodate ordered unit specs

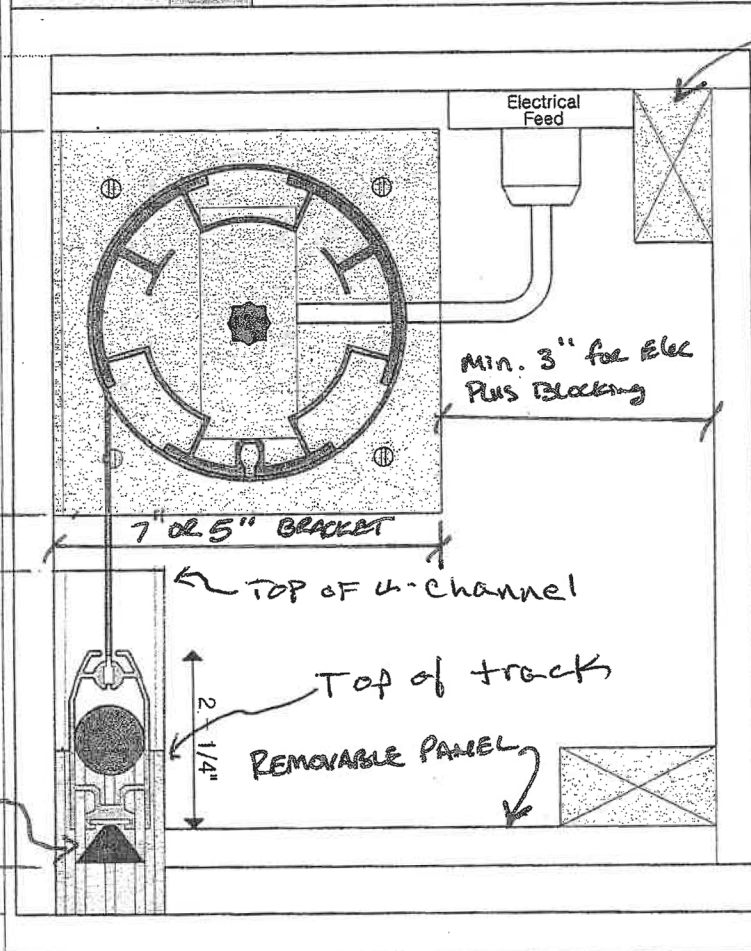

Blocking

Installation Notes
5"x5" Recess Brackets to receive roll-tube.

NOTE: 7"x7" Brackets typically if width of tube is greater than 20'.


Min. Vertical Clearance of 9" to conceal unit & weight bar and sweep. 12" (5" typical)

Removable access panels located at front or bottom of recess cavity.

Power feed required at one of recess cavity, ensuring that receptical/box is forward inside of cavity. Make sure receptacle box allows for screen operation and for removal and installation of roll tube.

Weighted Bottom Bar w/#6 Re-Bar 5' @ Each End for Additional Weight (1.5/lbs per foot)

Recess Track
U-Channel w/track insert and adj. clips. Fasteners 24" OC, Min. Embedment 1-1/2" Wood 1/4" SDS or CMU 1/4" Masonry Screws

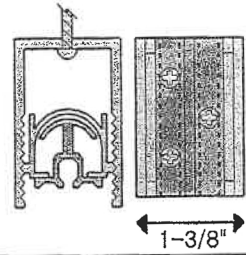

Recessed Roll Screen Installation (IAHR)



REVISIONS	
MM/DD/YY	REMARKS
1 10/29/2014	Original Date of Drawing
2	
3	
4	
5	

03
A